Autonics

ROTARY ENCODER (INCREMENTAL TYPE) E18S SERIES

INSTRUCTION MANUAL





[Axial cable type]

[Radial cable type]

Thank you for choosing our Autonics product. Please read the following safety considerations before use.

Safety Considerations

- **Please observe all safety considerations for safe and proper product operation to avoid
- $imes \Delta$ symbol represents caution due to special circumstances in which hazards may occur.

Marning Failure to follow these instructions may result in serious injury or death

↑ Caution Failure to follow these instructions may result in personal injury or product damage.

∧ Warning

- Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss, (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)
- Failure to follow this instruction may result in fire, personal injury, or economic loss.
- 2. Install on a device panel to use.
- Failure to follow this instruction may result in fire.
- 3. Do not connect, repair, or inspect the unit while connected to a power source.
- Failure to follow this instruction may result in fire. 4. Check 'Connections' before wiring.
- Failure to follow this instruction may result in fire
- 5. Do not disassemble or modify the unit. Failure to follow this instruction may result in fire


∧ Caution

- 1. Use the unit within the rated specifications.
- Failure to follow this instruction may result in fire or product damage.
- 2. Do not short the load.
- Failure to follow this instruction may result in product damage by fire.
- 3. Do not use the unit in the place where flammable/explosive/corrosive gas, humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present. Failure to follow this instruction may result in fire or explosion.
- 4. Do not use the unit near the place where there is the equipment which generates strong magnetic force or high frequency noise and strong alkaline, strong acidic exists. Failure to follow this instruction may result in product damage.

Ordering Information

	9					
E18S	2.5	- 200	- 1	- N	- 5	- R
Series	Shaft diameter	Pulses/ Revolution	Output phase	Control output	Power supply	Cable
Diameter Ø18mm shaft type	2: Ø2mm 2.5: Ø2.5mm	100, 200, 300, 400	1: A	N: NPN open collector output V: Voltage output		R: Axial cable type S: Radial cable type

Control Output Diagram

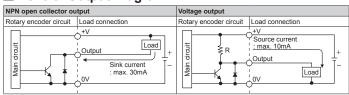

- **The above specifications are subject to change and some models may be discontinued without notice.
- *Be sure to follow cautions written in the instruction manual, and the technical descriptions (catalog, homepage)

Specifications


Item			Diameter Ø18mm shaft type of incremental rotary encoder
- R	NPN open collector output Voltage output		E18S1-N-5
ĕ			E18S1-V-5-
Res	Resolution (PPR) ^{×1}		100, 200, 300, 400
	Output phase		A phase
	Control output	NPN open collector output	Load current: max. 30mA, residual voltage: max. 0.4VDC==
۾		Voltage output	Load current: max. 10mA, residual voltage: max. 0.4VDC==
Electrical specification	time	NPN open collector output	Max. 1μs (cable length: 1m, I sink = 20mA)
ecific		Voltage output	
sb	Max. response frequency		25kHz
<u>s</u>	Power supply		5VDC== ±5% (ripple P-P: max. 5%)
lect	Current consumption		Max. 50mA (disconnection of the load)
۱ш	Insulation	n resistance	Over 100MΩ (at 500VDC megger between all terminals and case)
	Dielectric	strength	500VAC 50/60Hz for 1 min. (between all terminals and case)
	Connection		Axial cable type, radial cable type
<u>a</u>	Startin	ng torque	Max. 10gf·cm (9.8×10 ⁻⁴ N·m)
anic	Mome	nt of inertia	Max. 0.5g·cm² (5×10 ⁻⁸ kg·m²)
Mechanical	Shaft loading		Radial: max. 200gf, Thrust: max. 200gf
ž	Max. allowable revolution ^{※2}		6000rpm
Vib	Vibration		1.5mm amplitude at frequency of 10 to 55Hz (for 1 min) in each X, Y, Z direction for 2 hours
Sho	ock		Approx. max. 50G
En	/ironment	Ambient temperature	-10 to 70°C, storage: -20 to 80°C
EIIV	/IIOIIIIIeiii	Ambient humidity	35 to 85%RH, storage: 35 to 90%RH
Pro	Protection structure		IP50 (IEC standard)
Cable			Ø1.28mm, 3-wire, 150mm, Flat ribbon cable (AWG26, core diameter: Ø1.28mm)
Accessory			Ø2mm coupling (supplied only for Ø2mm shaft diameter model.)
Approval		·	(€ a ' 1/4 a 5
Weight ^{**3}			Ø2mm Shaft diameter model: approx. 35.4g (approx. 12g) Ø2.5mm Shaft diameter model: approx. 34.2g (approx. 12g)

- X1: Not indicated resolutions are customizable
- ※2: Make sure that max. response revolution should be lower than or equal to max. allowable revolution when selecting the resolution.

[Max. response revolution (rpm)= Max. response frequency x 60 sec] Resolution

*3: The weight includes packaging. The weight in parenthesis in for unit only Environment resistance is rated at no freezing or condensation.

Dimensions

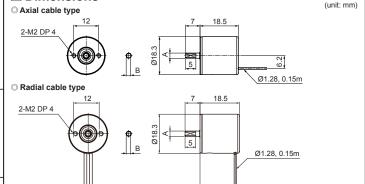

○ Coupling		
Ø9	13.5	
Ø2 *0.1	1.8	
	i i manari i	• Par
₹₽	1 911119	• Ang

rallel misalignment: max. 0.15mm

16.5

Ø2.0^{-0.004} 1.7

E18S2.5 Ø2.5-0.004 2.2

- Angular misalignment: max. 2°
- 4-M2 End-play: max. 0.2mm
- XDo not load overweight on the shaft.
- **Do not put strong impact when insert a coupling into shaft.

 Failure to follow this instruction may result in product damage.
- *Fix the unit or a coupling by a wrench under 0.15 N·m of torque.
- *When you install this unit, if eccentricity and deflection angle are larger, it may shorten the life cycle of this unit.

Connections


NPN open collector output/Voltage output



*Do not apply tensile strength over 10N to the cable.

Output Waveform

NPN open collector output / Voltage output

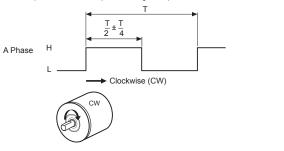

Cautions during Use

- 1. Follow instructions in 'Cautions during Use', Otherwise, It may cause unexpected
- 2. 5VDC power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- 3. For using the unit with the equipment which generates noise (switching regulator, inverter, servo motor, etc.), ground the shield wire to the F.G. terminal.
- 4. When using switching mode power supply, frame ground (F.G.) terminal of power supply should be grounded.
- 5. Check the wire type and response frequency when extending wire because of distortion of waveform or residual voltage increment etc by line resistance or capacity between
- 6. This unit may be used in the following environments.
 - (Indoors (in the environment condition rated in 'Specifications')
 - ②Altitude max. 2.000m
 - ③Pollution degree 2
 - (4) Installation category II

Major Products

- Photoelectric Sensors Temperature Controllers
- Fiber Optic Sensors Temperature/Humidity Transducers
- Door Sensors ■ SSRs/Power Controllers
- Door Side Sensors ■ Counters
- Timers Area Sensors ■ Proximity Sensors
- Panel Meters
- Tachometer/Pulse (Rate) Meters ■ Pressure Sensors ■ Display Units
- Rotary Encoders
- Connector/Sockets ■ Sensor Controllers
- Switching Mode Power Supplies

- Control Switches/Lamps/Buzzers
- I/O Terminal Blocks & Cables ■ Stepper Motors/Drivers/Motion Controllers
- Graphic/Logic Panels
- Field Network Devices
- Laser Marking System (Fiber, CO₂, Nd: YAG)
- Laser Welding/Cutting System

Autonics Corporation

■ HEADQUARTERS

18, Bansong-ro 513 beon-gil, Haeundae-gu, Busan, South Korea, 48002

TEL: 82-51-519-3232 ■ E-mail: sales@autonics.com

DRW171363AD